

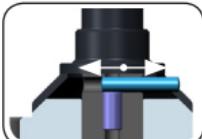
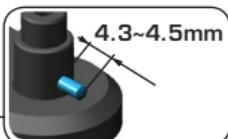


#182010 FLYWHEEL/CLUTCH MULTI-TOOL

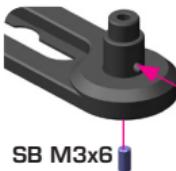

A. SETTING THE PIN LENGTH:

1. Insert the pin into the hole in the tool, and set the length to approximately 4.3~4.5mm. Secure the pin in place with the setscrew.
2. Try to put the clutchbell onto the multi-tool with the pin in place. The pin should protrude slightly beyond the hole in the clutchbell.
3. If the clutchbell will not go onto the tool or the pin will not protrude enough: remove the clutchbell, adjust the pin length slightly, and then retighten the setscrew.
4. Repeat steps 2 and 3 until you can mount the clutchbell on the tool with the pin in place.

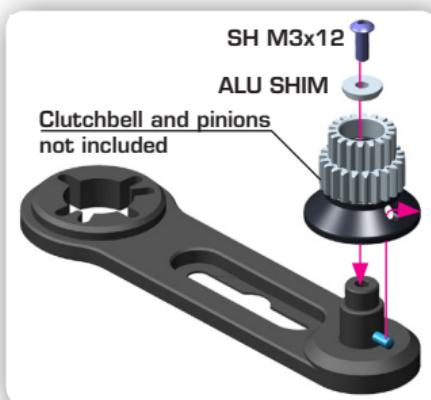

Place the clutchbell onto the multi-tool, rotate the clutchbell to align the holes in the tool and clutchbell, then press the pin into the aligned holes. Secure the clutchbell to the tool using the screw and washer; make sure the screw is tight.

With the clutchbell securely attached to the tool, use the pinion tool to loosen and tighten the pinions.

